


SMOKE DETECTOR

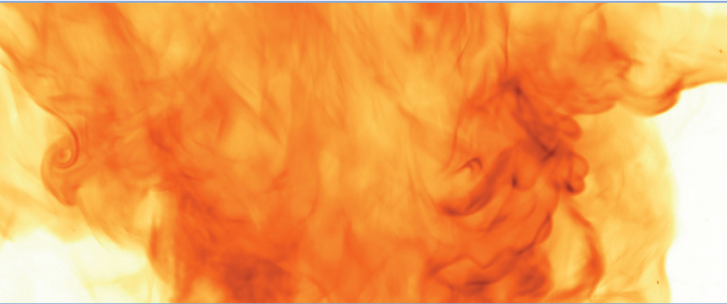

What should I do in the event of a fire?

- Remain calm!
- In the event of thick smoke, try to move along as close to the floor as possible.
- Immediately leave the dwelling along with all other persons.
- Help fellow residents who are older, handicapped or sick, without endangering oneself.
- Keep the doors and windows of burning rooms closed, in order to prevent fire and smoke from spreading.
- Do not use any lifts.
- Warn other inhabitants of the building.
- **Notify the fire brigade under telephone number 112**

Important information for the fire service:

- **Who you are (name, telephone, etc.)**
- **Where the fire is (address)**
- **What has happened (extent of the fire)**
- **What the situation is (injured persons, etc.)**
- **Wait for the fire brigade to give you instructions.**

kalOMAGNUS smoke detectors for your security



User information

KALORIMETA on-call service for smoke detectors

SMOKE DETECTOR



Safeguarding your life

kaloMAGNUS smoke detectors, a high-value product, have been installed in your home. The sole purpose of this measure is to protect your life and your health. The installed devices will warn you promptly and reliably concerning smouldering fires as well as open fires which produce smoke, and thus provides you with time which can be crucial for survival, so that you and all those persons presenting your dwelling can reach safety, call the fire brigade under the telephone number 112 and/or undertake the measures appropriate for extinguishing the fire.

A highly-developed device

The highly-developed kaloMAGNUS permanently checks whether smoke can be detected using an optic sensor. Should a fire be detected, it warns you of this by means of a loud acoustic alarm signal and a blinking red light. Under normal conditions, a functional display which blinks about every minute indicates electrical operational readiness. As the smoke detection uses optic means, the device does not generate any dangerous radiation whatsoever.

Secure installation – important information

The smoke detector has been carefully installed by KALORIMETA in adherence to the mandatory application norm DIN 14676. Smoke detectors must therefore not be removed from where they have originally been installed and installed at another location. Painting over, wallpapering or covering up the kaloMAGNUS leads to malfunctions or even to failure of the device. On principle, the kaloMAGNUS may only be subject to soiling which corresponds to that from normal use of a dwelling. Smoke detectors do not put out fires; they can only give warning. Should the kaloMAGNUS become damaged, please call the service number given on the back immediately. In the event of conversion of your premises please inform your facility management.



Annual maintenance

The kaloMAGNUS is equipped with a high-performance lithium battery, so that replacing the batteries is not necessary during its entire service life. Nonetheless, maintenance in accordance with DIN 14676 is required annual intervals, which will be scrupulously conducted for you by KALORIMETA (if possible together with reading of the heating cost measuring device). This includes documentation of the check of the operation of the smoke detector and the unchanged correct positioning of the detector, as well as of maintenance through a meter reading receipt.

What should I do when the smoke detector emits a signal?

Remain calm. In the event of an unlimited acoustic signal, first check your premises to see if you can detect a fire. If no fire can be detected, you may activate muting by pressing the top of the casing (it may also be activated using a broomstick). The muting switch disables the signal for approximately 10 minutes. In this time the detector blinks every ten seconds to signal that the detector is in the mute mode. Thoroughly air out the room, and check as to whether this is due to steam, cooking vapours or harmless sources of smoke. As soon as the possible causes have been eliminated, the smoke detector will return to normal operation.

Should the detector emit a short acoustic signal every 40 seconds with or without an simultaneous blink, a malfunction is involved. In this case please call the service number provided on the back.